



IMPORTANT CARE GUIDE





QUICK GUIDE FOR IMPORTANT CARE OF THE EQUIPMENT

Read the instructions carefully.

1 LUBRICATION

Lubricate the pruner daily to avoid overheating or excessive wear of the axis caused by friction.

- Disconnect the cable connecting the pruner to the battery, even if it is switched off;
- Using the screwdriver supplied with the kit, remove the screw on the blade pin (Item #11);
- Apply the recommended amount (6 gr, 2 pumps) of grease (RETINAX HD2) using the supplied grease pump and lubricate the pin as shown on the right.

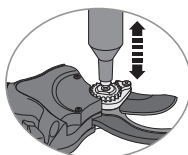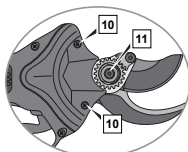

Every 50 hours, lubricate the blade gears as shown below:

- Disconnect the cable connecting the pruner to the battery, even if it is switched off;
- Remove the screws and remove the protective cover (Item #10);
- Lubricate the point shown in Fig. 14 with a small amount of grease (RETINAX HD2).




2 BATTERY

Before storing the battery after the pruning season or for long periods, completely recharge the battery. The battery must be fully charged every 3 months during long periods of non use. Failure to follow these instructions will void the warranty and could cause damage to the equipment. If the battery is not fully charged, at least every 3 months, then the battery may no longer take a charge. If the battery no longer takes a charge, please contact technical assistance for help.

3 MISUSE

If the blade cannot cut the branch because of its excessive diameter or the hardness of the wood, do not continuously reattempt to cut and do not for any reason force it laterally during the cutting operation.

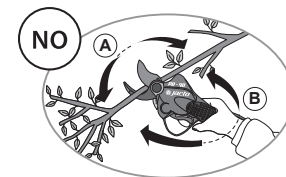

It is mandatory to read and thoroughly understand the complete operator's manual before using the equipment.